



GSP-1600

QUICK START GUIDE

Phone Registered “**i**” and in Satellite Mode “”

Make sure your satellite phone is operating in Satellite Mode by verifying that the “” is displayed in the status bar.

The “**i**” verifies that your Globalstar satellite phone is registered and ready to make outgoing calls.

“**i**” also indicates that additional information is available. Press “” for service provider information and current phone number.

Making calls

Always rotate and extend the antenna fully and keep it pointing straight up to the sky before dialing and while talking.


 


Correct

Incorrect

In Globalstar satellite mode, ensure:

- ▲ You are outdoors
- ▲ You have a clear view of the sky
- ▲ Your satellite antenna is pointing straight up to the sky

When making satellite calls, check for the Globalstar Satellite Mode icon “”, signal strength indicator “” on phone display and that the registered icon “**i**” is visible.

For calls within North America

Press “**1**” + **area code** + **number**

For international calls from within North America

Press “**011**” + **country code** + **city code** + **number**
(Long Distance Charges May Apply. Visit Globalstar.com)

For all calls while outside of North America

Press and hold “**0**” and hold until “**+**” appears + **country code** + **area code** + **number**. (Roaming Charges May Apply. Visit Globalstar.com/Roaming)

To call Globalstar Customer Relations

Press “***611**” and press “**Send**”. (No charge)

Emergency Number

Press “**911**” and press “**Send**” (No charge - Calls routed to third party emergency service provider)

Toll Free Numbers

Dial 1-800 # Series (Standard airtime charges apply - Calls subject to regional area code routing)

Airtire

Includes all inbound and all outbound calls other than *611 (Globalstar Customer Relations) and *911 (Emergency Services Provider)

Save Phone Book entry

Enter phone number. Press “▲” for **save**.
Enter name and locations. Press “▲” for **ok**.

Find Phone Book entry

Press “▲” for **book**. Press “▲” for **find**.
Press “1”, “2” or “3”.
Enter numbers or letters. Press “▲” for **find**.

Receiving calls

- ▲ Check that the phone is on
- ▲ Check that the ringer is loud enough
- ▲ Rotate or fully extend the appropriate antenna

In Globalstar satellite mode, ensure:

- ▲ You are outdoors
- ▲ You have a clear view of the sky
- ▲ Your satellite antenna is pointing straight up to the sky

Check signal strength indicator “” on phone display and that the registered icon “**i**” is visible.

Satellite Phone Number

Press “” to display your Globalstar satellite phone number.

Voice Mail

- ▲ Call your Globalstar number from any touch tone phone or from your Satellite phone
- ▲ Press “**5**” when you hear the greeting
- ▲ Enter personal password (temporary password is 12345)

Call Forwarding

Unconditional Call Forward

To Activate: Press “***72**” + **forwarding #**, and “**Send**”
To Deactivate: Press “***720**” and “**Send**”

No Answer Call Forward

To Activate: Press “***92**” + **forwarding #**, and “**Send**”
To Deactivate: Press “***920**” and “**Send**”

Busy Call Forward

To Activate: Press “***90**” + **forwarding #**, and “**Send**”
To Deactivate: Press “***900**” and “**Send**”

Did you know your GSP-1600 is data capable?

Visit Globalstar.com/9600 to find out how to use it.

Coverage Map

Visit Globalstar.com/Coverage for coverage details.

If you have any inquiries, please call our Customer Relations at “***611**” from your Globalstar phone, **1.877.452.5782** from any touch tone phone or e-mail customercare@globalstar.com. To reach the Customer Relations while outside of North America, please dial **985.327.7500**.

QUALCOMM GSP-1600 DISPLAY INDICATORS



Phone is operating in Globalstar satellite mode.



Phone operating in digital mode.



Signal strength. Four lines indicates strong signal, one line indicates extremely weak signal.



Phone is roaming.



Call in progress.



No service.



Voice mail notification received.



Battery charge. Four diagonal bars indicates full charge, and blinking indicates no charge.



Phone is registered and ready to make calls.



Designates the menu option currently selected.