

Always Check "Full" Icon	Located to the left of the battery indicator on phone display, the level of bars in the "Full" icon indicates signal strength.
Always Check "Home" Icon	To make a call, either the home service "Home" icon or the roaming service "Roaming" icon must be steady and visible.
Making Calls <i>Always rotate and extend the antenna fully and keep it pointing straight up to the sky before dialing and while talking.</i>	<p>Always rotate and extend the antenna fully and keep it pointing straight up to the sky before dialing and while talking.</p>   <p>Before making a call ensure:</p> <ul style="list-style-type: none"> ▲ You are outdoors. ▲ You have a clear view of the sky. ▲ Your satellite antenna is pointing straight up to the sky. <p>Check signal strength indicator on phone display. The "Full" icon is visible.</p>
Turn on Service Alert	Please set your phone to "chirp" when you enter and exit service areas. The default setting is OFF. To change, press the "Menu" key, then "7", then "3", then "3" again, then toggle to ON using the volume button.
For Calls Within North America	Dial "1" + area code + number + * (No long distance charges apply for calls placed in USA and Canada).
For International Calls From Within USA & CAN	Dial "0" and hold until "+" appears + country code + area code + number. (Long Distance Charges May Apply)
For All Calls While Outside Your Home Zone	Dial "0" and hold until "+" appears + country code + area code + number. (Roaming Charges May Apply)

Customer Care	To call customer care, dial "*611" and press from your GSP-1700 satellite phone, 1.877.452.5782 from any touch tone phone or visit Globalstar.com .	
	To reach Customer Care while outside of North America, please dial 985.327.7500.	
Directory Assistance	Dial "1" + area code + 555-1212 + press .	75 cents per call + applicable airtime charges.
Emergency Number/S.O.S.	Dial "9-1-1" and press .	No charge (Calls routed to third party emergency service provider).
Toll Free Numbers	Dial 1-800 # Series.	Standard airtime charges apply (Calls subject to regional area code routing).
Airtime	Includes all inbound and outbound calls other than calls to Globalstar Customer Care and 9-1-1.	
Save Phone Book Entry	Enter phone number. Press save. Enter name and locations. Press ok.	
Find Phone Book Entry	Press book. Press find. Press "1", "2" or "3". Enter numbers or letters. Press find.	
Receiving Calls	Check that the phone is on and that either the home service "Home" icon or the roaming service "Roaming" icon is visible.	
	<p>Ensure:</p> <ul style="list-style-type: none"> ▲ Check that the ringer is loud enough. ▲ Rotate and fully extend the antenna. ▲ You are outdoors. ▲ You have a clear view of the sky. ▲ Your satellite antenna is pointing straight up to the sky. 	
	Check signal strength indicator on the phone display and service availability (the "Full" icon is visible).	

Direct Internet Data Access	<ol style="list-style-type: none"> 1. Check that the phone is on. 2. Connect the data cable to the phone and computer. After software is installed, the computer will automatically configure the data drivers. 3. Change dialing properties to the number that you are connecting to.
Menu '9'	Displays your GSP-1700 phone number.
Voicemail	<ul style="list-style-type: none"> ▲ Dial "*86" from your phone. Press . ▲ Call your number from any touch tone phone or from your GSP-1700 satellite phone. ▲ Press "5" when you hear the greeting.
Call Forwarding	Unconditional Call Forward To activate: Press "*72" + forwarding #, and . To deactivate: Press "*720" and .
	No Answer Call Forward To activate: Press "*92" + forwarding #, and . To deactivate: Press "*920" and .
	Busy Call Forward To activate: Press "*90" + forwarding #, and . To deactivate: Press "*900" and .
Obtaining Your GPS Coordinates	Your Globalstar phone can broadcast your latitude and longitude with an accuracy within 1/4 mile of GPS-based coordinates when needing 911 emergency response without having a GPS device. Simply make a call, then press Key, then "4", then "3", then press key. Your approximate location will be broadcast on the screen which you can read to first responders while on a 911 call.
What if My Call Drops?	If you are on a call and it drops, don't worry. Globalstar satellites are constantly orbiting the earth right above you. That means if one passed out of sight and dropped your call, another one is right behind it. Simply make sure your antenna is fully extended and pointed straight up to the sky and redial.

1. Voicemail Access & Setup

- ▲ To set-up GSP-1700 voicemail
 - ▲ Call your number from any touchtone phone
 - ▲ Dial **5** when you hear the greeting
 - ▲ Follow the prompts
- ▲ To access your voicemail from your GSP-1700 phone dial ***86**

4. Retrieve Messages

- ▲ Replay message **1**
- ▲ Envelope information **5**
- ▲ Erase message **7**
- ▲ Save message **9**
- ▲ Voicemail help **0**
- ▲ Skip message **#**
- ▲ EXIT sub-process *****

2. Legend

Power Keys

Controls that are frequently available depending on the process:

- HELP **0**
- Finish/Skip **#**
- Cancel/Exit to previous menu *****

Additional Play Control

- Rewind 8 seconds back **1**
- Rewind to start of message **1 1**
- Fast forward 8 seconds forward **3**
- Fast forward to end of message **3 3**

5. Send Message

- ▲ Delivery option **1**
- ▲ Replays message **2**
- ▲ Re-record message **3**
- ▲ Continue recording message **4**
- ▲ Voicemail help **0**
- ▲ Finish/complete **#**
- ▲ Recording canceled/exit *****

3. Playback Controls

Controls that can be used while listening to a message. Some controls are available while recording messages.

Position	Rewind 1	Pause/Restart 2	Forward 3
Speed	Rewind 4	Pause/Restart 5	Forward 6
	7	8	9
Power Keys	Rewind *	Pause/Restart 0	Forward #

6. Personal Options

- ▲ Notification **1**
- ▲ General option **2**
- ▲ Greeting **3**
- ▲ Language profile **4**
- ▲ Voicemail help **0**
- ▲ Cancel/exit the system **#**
- ▲ Cancel/exit to previous menu *****